


Point Five Windows

Thermal window operating instructions

Step 1:

Pictured is a typical window as delivered from the Point Five Window factory, equipped with an electrically heated I.G. unit. This view shows the controller display and power on/off switch at the head of the window.

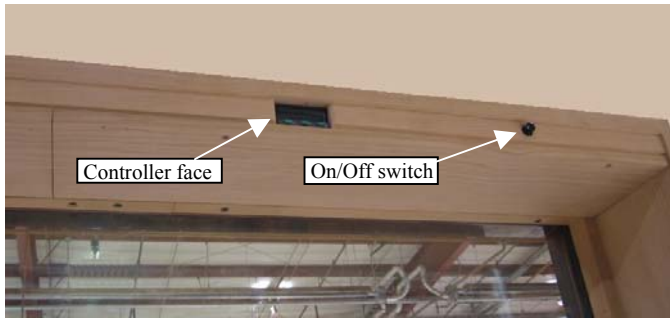

#1

If the controller led display is not illuminated, depress the on/off switch to provide power. After the controller runs a circuit test, the display readout shows the approximate temperature (Fahrenheit) of the glass surface facing the interior.

Step 2:

To see what operating temperature the window is set to operate at, depress the left button * on the control box.



#2

Step 3:

To set the operating temperature of the window higher, depress the left button * and hold. Then depress the right button ▲ on the control box. Which raises the readout to the desired temperature.



#3

Step 4:

To set the operating temperature of the window lower, depress the left button * and hold. Then depress the center button ▼ on the control box. Which lowers the readout to the desired temperature.



#4

Caution: Disconnect at breaker box only

Other than the temperature setting steps outlined above, there are no components in this assembly that can be serviced by anyone that has not been trained to do so.